Due//Matic A/S

Operating Instructions Compact 8, Sporting Cart, 12V



DUE//MATIC A/S, FJORDVEJ 21 DK - 8900 RANDERS DANMARK TLF. +45 8640 5888 E-MAIL: duematic@duematic.dk

FAX: +45 8641 8111 WEB: www.duematic.com

List of contens:

Assembling the trap	3
Electronics box	4
Operation off all switches	4
Starting the trap	5
Unloading and switch off the trap	6
Adjusting the length of the launch	7
Tilt adjustment (up / down)	8
Tilt adjustment (right / left)	9
Adjusting the micro-switch	10
Adjusting target seperator knives	11

Electrical diagrams

Assembling the trap

- 1. Mount Safety Guard. DO NOT USE THE TRANSPORTBOLTS.
- **2.** Mount magazine.



3. Mount electric box



Operation of all switches:

- **1.** Connect the trap to the battery
- **2**. The following switches can be found on the electronics box
 - Emergency STOP
 - Power
 - Manuel release
 - Signal lamp



Starting the trap

- 1. Check that the launching direction is free.
- 2. Check STOP has not been actuated. If actuated, release the STOP turning the red button clockwise.
- 3. **Push the Power switch**, the signal lamp lights.
- **4. Activate the Release button**. The throwing arm moves to loaded position.
- 5. The Trap is now loaded and can be released by ext. switch



Unloading and switch off the trap

- **1. Check** that the launching direction is free.
- 2. Activate POWER switch. The signal lamp turns off.
- **3.** Activate the MANUEL RELEASE switch. The Trap will release a target and stop.
- **4.** Position of throwing arm must be in "original" position.
- 5. The Trap is now swiched off

When trap is unused, it must be unloaded.



Adjusting the length of launch

NOTICE: BY ALL ADJUSTMENT UNLOAD THE MACHINE

Adjust the length of the launch with 19 mm spanner



- **1.** Turn right to increase the length of launch to max.
- **2.** Turn left to decrease the length of launch to min.

Tilt adjustment (up / down)

NOTICE: BY ALL ADJUSTMENT UNLOAD THE MACHINE

- **1.** Loosen the bolt "A" with 19 mm spanner
- **1.** Tilt the machine to correct position.



Pos 1: DOWN (- 10⁰)





3. Remember to tighten bolt "A" after adjustment



Tilt adjustment (right / left)

POS 1: LEFT (45⁰)

NOTICE: BY ALL ADJUSTMENT UNLOAD THE MACHINE

- **1.** Loosen the bolt "B" with 19 mm spanner.
- **2.** Tilt the machine to correct position.



POS 2: RIGHT (30⁰)

Back view

3. Remember to tighten bolt "B" after adjustment



Back view

Adjusting the micro-switch

NOTICE: BY ALL ADJUSTMENT UNLOAD THE MACHINE

When loaded, the placement of the launching arm is determined by a microswitch. If it is set incorrectly, the launch may be delayed and the trap may launch serval targets after one another, even if the pressure switch is only pressed once.

Correct adjustment of microswitch:

- **1.** The launching arm too far to right, adjust the micro-switch to left.
- 2. The launching arm too far to left, adjust the micro-switch to right.



Adjusting target seperator knives.

NOTICE: BY ALL ADJUSTMENT UNLOAD THE MACHINE



Seperator knives

Adjust knives up/down bolt "A" . Use 8 mm spanner. Distance between knives and target: Just a little slice (0,2 mm)

In the outer knife, loosen bolt "B" (3 pcs) with 8 mm spanner adjust the knife so the targets can pass. Distance about 1 mm

Remember to tighten the bolts "B" after adjustment.



Please note:

The magazine is dismounted for the transport.

Mounting the magazine it is important to notice following:

The trap has been adjusted, so if the magazine is correct re-mounted the target vill be placed on the right time.

Mounting the magazine:

- * Loosen chaintensioner bolt "A" with 17 mm spanner.
- * Fit the chain on magazin. Start on the right side

IMPORTANT: Notice position of the two arrows "B"

* Mount the magazine, and tighten bolt "C" <u>underneath</u> with 19 mm spanner.

Fingertighten the chain with "D", and tighten chaintensioner bolt "A" with 17 mm spanner





